Honeywell VuQuest 3310g Reprogramming Manual

- 1) Go to IDScan.net \rightarrow Downloads
- 2) Download Configuration Application, Config File, and USB Drivers
- 3) Install the application and the USB Drivers
- 4) Connect your Honeywell
- 5) Open Application web page from a web browser. Use specific shortcut for each browser. In our case we used FireFox and it demonstrated better results.
- 6) Click on "Connected Device"



7) Select Your device and click "Configure Device"

	GETTING STARTED NEW FEATURES CHECK FOR EZCONTIG UPDATES FAQ HELP TECHNICAL KNOWLEDGE BASE
A Home Connected Device	
🔇 Refresh	
Honeywoll Vuquest 3310 Area-Imaging Scanner	
Model: 3310 Serial No: 14073B2F19 Firmware No: BY000042EAA Connection: USB SERIAL No License/Plug-in found	

- 8) Click "Open Config" and select downloaded earlier file ConfigSettings.exm
- 9) Click on Save to Device

-		- GETTING STARTED NEW	V FEATURES CHECI	K FOR EZConfig UPDATE	S FAQ HELP TECHNICAL	KNOWLEDGE BASE
	VICE			SEARC	:Н	sea
A Home ► Connect	ted Device ► 1.Settings ► In	put/Output Settings 🕨 Beepe	Settings			
DEVICE DETAILS		Vu	quest 3310 Area-In	naging Scanner		
Scanner Device	I.SETTINGS	2.SYMBOLOGIES 3.DA	TA FORMATTING	4.IMAGING	5.SCAN DATA WINDOW	6.COMPAR
1407: Eirm	Input/Output Settin	gs Interfaces License	s / Plug-ins (Apps)	T		
Horeywell BYD0	Beeper Settings S	canning Options Device Setting	s			
3310	Beeper					
Configuration History		Fast Beep	Off On	Default: 0		
Note: Click on the undo a undo the change to a pa	arrow 🖛 to rameter.	Number of Beeps per Good Read	1	Range: 1-9 Default: 1		
Bar Code Generation	A	Beeper - Good Read	Off 🔄 📕 On	Default: 1		
Settings Change	I Settings 👻	Beeper Pitch - Error	250	Range: 200-9000 Defa	ault 250	
Bar Code Type 1D	· · ·	Number of Beeps - Error	1	Range: 0-9 Default: 1		
GENERATE BAR	CODE	Good Read Beep Frequency	2700	Range: 400-9000 Defa	oult: 2700	
(and) services Drift		Beep on BEL character	Off 📕 On	Default 0		
OPEN CONFIG		Power Up Beep	Off 🔄 📕 On	Default 1		
SAVE CONFIG		Trigger Click	Off 📕 On	Default. 0		
		Volume	High 🗸	Default: 3		
SAVE TO DEVIC		Decode Beep	0	Range: 0-9 Default: 0		
		No Decode Beep	0	Range: 0-9 Default: 0		
			2000 - 100 -			

10) In Device Manager verify that you have Vuquest 3310 scanner under Ports (COM & LPT)

🎰 🚮 I eredo Tunneling Pseudo-Interface
Portable Devices
Ports (COM & LPT)
CCP Plinter Polt (CP11)
B December 2
Sound, video and game controllers

If necessary disconnect and re-connect the device and reinstall USB drivers